

## MODEL PAXCDC -DEVICENET™ OUTPUT OPTION CARD



### DESCRIPTION

The DeviceNet Option Card (PAXCDC30) is designed for the PAX series of meters. It fits into the Comms slot of any PAX meter and allows the meter to communicate with a DeviceNet bus. The card supports Polling, Bit Strobe, and

Explicit Message Commands. The Mac ID and the Baud Rate are switch adjustable via a DIP switch. A bicolor LED is used to indicate the meter's status in relationship to the bus.

### INSTALLING AN OPTION CARD






**Caution:** The option and main circuit cards contain static sensitive components. Before handling the cards, discharge static charges from your body by touching a grounded bare metal object. Ideally, handle the cards at a static controlled clean workstation. Also, only handle the cards by the edges. Dirt, oil or other contaminants that may contact the cards can adversely affect circuit operation.



**Warning:** Exposed line voltage exists on the circuit boards. Remove all power to the meter AND load circuits before accessing the unit.

1. Remove the main assembly from the rear of the case. Squeeze the finger holds on the rear cover, or use a small screwdriver to depress the side latches to release it from the case. It is not necessary to separate the rear cover from the main circuit card.
2. Locate the option card connector for the type of option card to be installed. Hold the unit by the rear connector, not the display board, when installing an option card.
3. Install the option card by aligning the option card connector with the slot in the rear cover. The cards are keyed by position with different main board connector locations. Be sure the connector is fully engaged and the tab on the option card rests in the alignment slot on the display board.
4. Slide the assembly back into the case. Be sure the rear cover latches fully into the case.
5. Apply the option card label to the bottom side of the meter. Do not cover the vents on the top surface of the meter. The surface of the case must be clean for the label to adhere properly. Apply the label to the area designated by the large case label.
6. See manual for wiring connections and programming procedures.

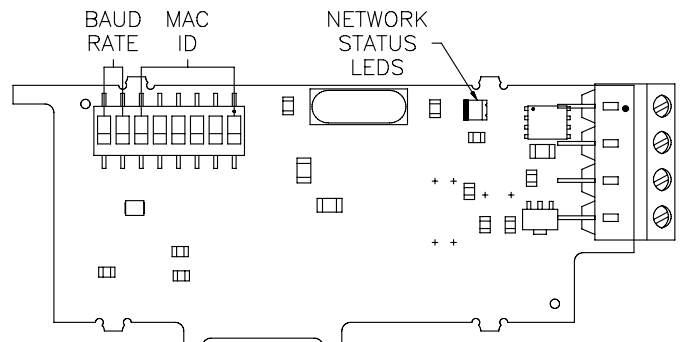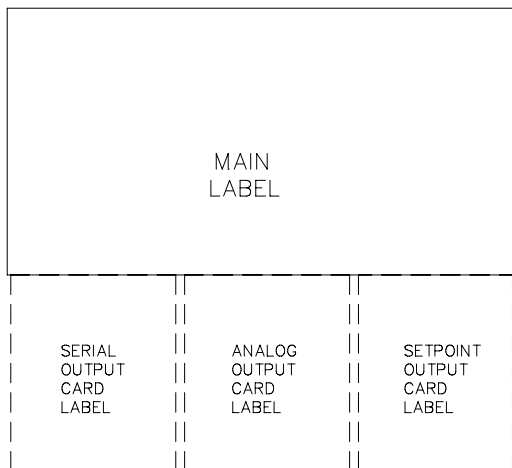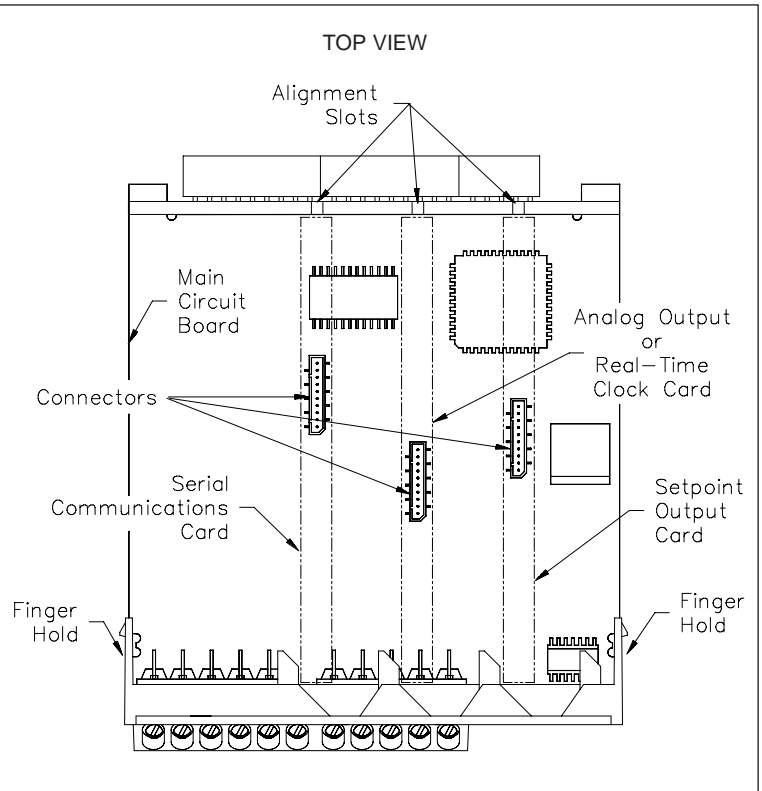

### DIP SWITCHES

Both MAC ID and baud rate are set via DIP switches on the DeviceNet™ option card. See the DIP switch setting table for more details on these DIP switches. Configuration of MAC ID and baud rate is not supported over DeviceNet™

### NETWORK STATUS LEDs

The network status LEDs provide visual indication to the operator of the DeviceNet™ card's current status.

### ORDERING INFORMATION

MODEL NO.	DESCRIPTION	PART NUMBER
PAXCDC	PAX DeviceNet™ Output Card	PAXCDC30

# DeviceNet™ SPECIFICATIONS

## POWER SUPPLY

**Source:** Supplied by DeviceNet™ bus.

The bus does not power the host.

**Voltage:** 11 to 25 VDC.

**Current:**

Nominal: 40 mA at 25 VDC.

Inrush: 550 mA for 5 msec at 25 VDC.

## NETWORK SPECIFICS

**Compatibility:** Group 2 Server Only, not UCMM capable.

**Baud Rates:** 125 Kbaud, 250 Kbaud, and 500 Kbaud.

**Bus Interface:** Phillips 82C250 or equivalent with mis-wiring protection per DeviceNet™ Volume 1 Section 10.2.2.

**Node Isolation:** Bus powered, isolated node.

Host Isolation: 500 Vrms for 1 minute (50 V working) between DeviceNet™ and meter input common.

**Bus Connection:**

12 V+

13 CAN\_H

14 CAN\_L

15 V-

Shield: No Connection

## INSTALLATION INFORMATION

**Factory Settings:**

**Baud rate:** 125 KBs.

**MAC ID:** 63

**Strobe Register:** 07h

**Polling bits:** All on.

**Swap data flag:** Off.

## DIP SWITCH SETTING TABLE

SWITCH #	SETTING
1 - 6	MAC ID (all off = 0, all on = 63) Switch 1 is LSB (1), switch 6 is MSB (32).
7 off, 8 off	125 K baud
7 on, 8 off	250 K baud
7 off, 8 on	500 K baud
7 on, 8 on	N/A

## CONNECTION SIZES

**Device Profile:** This product conforms to the DeviceNet™ specification Volumes I and II of version 2.0.

**Device Configuration:** No DeviceNet™ configuration is supported. However, some meter configuration is supported.

MESSAGE	PRODUCED	CONSUMED
Explicit	4 Bytes	4 Bytes
Polled	4 Bytes	6 Bytes
Bit Strobe	4 Bytes	8 Bytes

## NETWORK STATUS LEDs

**What to look for:**

A. Flashing Red LED:

This device is the only device on the network (waiting for an acknowledgment to its duplicate MAC ID check), or an I/O connection has timed out, or a recoverable error has occurred.

B. Flashing Green LED:

The device is functioning correctly and is waiting to be commissioned by a bus master.

C. Solid Red LED:

The device has encountered a non-recoverable fault, such as a duplicate Mac Id response, and has removed itself from the bus, or the device is in a power up reset state and is attempting to come on line.

D. Solid Green LED:

The device is on line, functioning correctly and has been commissioned by a bus master.

## SUPPORT CONNECTIONS

**Polled Command:** The Polled Command consumes 6 bytes of data, and is used to get, set, or reset attributes. The meter attribute is determined by the value in byte 0 of the data field. Refer to the Attribute Identification Chart for the appropriate value. Byte 1 determines the action: 0 = get, 1 = set, 2 = reset. The next 4 bytes are the new attribute value for the set command. For get or reset commands, enter 4 zeros. The data response from the Polled Command is in the format of a 4 byte hexadecimal number. For the get command (0), the response is the attribute value. For the set command (1), the response is an echo of the data input. For the reset command (2), all 0s are returned.

**Bit Strobe Command:** The Bit Strobe Command consumes eight bytes of data, or less. This is a read only predetermined meter attribute. The data response from the Bit Strobe Command is in the format of a 4 byte hexadecimal number. The register that will be read using the Bit Strobe command is determined by setting Attribute 2, Instance 1, Class 100\* (decimal) with a value that represents the desired attribute. Refer to the Attribute Identification Chart for the appropriate value.

\*Class 100 (decimal) is a vendor specific class.

## EXPLICIT MESSAGE COMMAND

**Get Attribute:** The attribute that will be read using the Get Attribute command is determined by setting Service Code 14, Instance 1, Class 100\* (decimal), and the attribute with a value that represents the desired meter attribute. Refer to the Attribute Identification Chart for the appropriate value. The data response from the Get Attribute Command is in the format of a 4 byte hexadecimal number.

**Set Attribute:** The attribute that will be set using the Set Attribute command is determined by setting Service Code 16, Instance 1, Class 100\* (decimal), and the attribute with a value that represents the desired meter attribute. Refer to the Attribute Identification Chart for the appropriate value. The data field for the Set Attribute Command is entered as a 4 byte hexadecimal number.

**Reset Attribute:** The attribute that will be reset using the Reset Attribute command is determined by setting Service Code 5, Instance 1, Class 100\* (decimal), and the attribute with a value that represents the desired meter attribute. Refer to the Attribute Identification Chart for the appropriate value.

\*Class 100 (decimal) is a vendor specific class.

Note: Not all meter attributes respond to a Set or Reset Attribute command. Refer to the Attribute Identification Chart for details.

## OTHER EXPLICIT MESSAGE ATTRIBUTES

**Data Byte Swap:** (1 byte), Attribute 1, Instance 1, Class 100 (decimal). Data is normally sent and entered as follows: Pax display value = 500000 (7A120h). 4 byte value sent would be 20 A10700. Setting the data swap value to 1 would result in the data being sent as 00 07 A1 20. This attribute can only be set to 0 or 1, all other values are ignored. The factory setting value is 0. Data byte is saved in EEPROM memory.

**DIP Switch Values:** (1 byte), Attribute 6, Instance 1, Class 100 (decimal). Returns the DIP switch setting. Switch 1 = LSB, 1 = on.

**Polling Flags:** (3 bytes) Attribute 3-5, Instance 1, Class 100 (decimal). The DeviceNet™ card is continually requesting values from the PAX unit. The polling flags determine what values are requested during each loop. Setting the flags to "1" enables the card to poll that particular value. A "0" value disables it. Turning polling flags off allows the user to request fewer values and therefore decreases the internal loop time, which allows the values that are polled to be updated more often.

### TYPICAL UPDATE TIMES

PAX	PAXI/PAXCK
All values (10) – 1.00 sec	All values (19) – 750 msec
5 values – 500 msec	10 values – 430 msec
1 value – 100 msec	5 values – 230 msec
	1 value – 52 msec

If a Set Attribute is executed for any value, that value is automatically updated to the latest value, regardless of whether the polling flag is on or off. On power up, all values are updated regardless of Polling flag settings. Polling flag values are saved in EEPROM memory. Factory settings is "on" for all Polling flags. See Attribute Identification Chart for polling flags.

## Vendor Specific Error Responses

CODE ERROR #	ERROR CODE MEANING
1F (General Code)	Vendor Specific Error
1 (Additional Code)	Meter Response Time-out
2 (Additional Code)	Vendor Service Not Supported
3 (Additional Code)	Command String Syntax Error

## Attribute Identification Chart\*

ATTRIBUTE	DESCRIPTION			SERVICE CODES SUPPORTED			POLLING
	PAX	PAXI	PAXCK	PAX	PAXI	PAXCK	
7	Input	Count A	Timer	G	G, S, R	G, S, R	Attr 3, bit 0
8	Total	Count B	Count	G, R	G, S, R	G, S, R	Attr 3, bit 1
9	Max	Count C	RTC Time	G, R	G, S, R	G, S	Attr 3, bit 2
10	Min	Rate	RTC Date	G, R	G, S	G, S	Attr 3, bit 3
11	SP 1	Min	SP 1	G, S, R	G, S, R	G, S, R	Attr 3, bit 4
12	SP 2	Max	SP 2	G, S, R	G, S, R	G, S, R	Attr 3, bit 5
13	SP 3	Scale A	SP 3	G, S, R	G, S	G, S, R	Attr 3, bit 6
14	SP 4	Scale B	SP 4	G, S, R	G, S	G, S, R	Attr 3, bit 7
15	AOR *	Scale C	SP 1 Off	G, S *	G, S	G, S	Attr 4, bit 0
16	CSR *	Load A	SP 2 Off	G, S *	G, S	G, S	Attr 4, bit 1
17	----	Load B	SP 3 Off	----	G, S	G, S	Attr 4, bit 2
18	----	Load C	SP 4 Off	----	G, S	G, S	Attr 4, bit 3
19	----	SP 1	Timer Start	----	G, S, R	G, S	Attr 4, bit 4
20	----	SP 2	Count Start	----	G, S, R	G, S	Attr 4, bit 5
21	----	SP 3	Timer Stop	----	G, S, R	G, S	Attr 4, bit 6
22	----	SP 4	Count Stop	----	G, S, R	G, S	Attr 4, bit 7
23	----	MMR *	MMR *	----	G, S *	G, S *	Attr 5, bit 0
24	----	AOR *	RTC Day	----	G, S *	G, S	Attr 5, bit 1
25	----	SOR *	SOR *	----	G, S *	G, S *	Attr 5, bit 2

\* Applies to manual mode only, see description that follows:

## MANUAL MODE DESCRIPTION

### (CSR) Control Status Register (PAX)

The Control Status Register is used to both directly control the meter's outputs (setpoints and analog output), and interrogate the state of the setpoint outputs. The attribute is bit mapped with each bit position within the attribute assigned to a particular control function. The control functions are invoked by writing to each bit position. The bit position definitions are:

bit 0: SP1 Output Status	} 0 = output off 1 = output on
bit 1: SP2 Output Status	
bit 2: SP3 Output Status	
bit 3: SP4 Output Status	
bit 4: Manual Mode	
1 = manual mode	
0 = automatic mode	
bit 5: Always stays 0	
bit 6: Sensor Status (PAXT only)	
0 = sensor normal	
1 = sensor fail	
bit 7: Always 0	

Writing a "1" to bit 4 of CSR selects manual mode. In this mode, the setpoint outputs are defined by the values written to the bits b0, b1, b2, b3; and the analog output is defined by the value written to the AOR. Internal control of these outputs is then overridden. In automatic mode, the setpoint output bits of the CSR has the same effect as a Reset command (R). The contents of the CSR may be read to interrogate the state of the setpoint outputs and to check the status of the temperature sensor (PAXT only).

#### Examples:

1. Select manual mode, turn all outputs on:  
Value to write to attribute 15 - 001Fh.
2. Select manual mode, turn outputs 1, 3 on:  
Value to write to attribute 15 - 0015h.
3. Select automatic mode, turn all outputs off:  
Value to write to attribute 15 - 0000h.

### PAXI, PAXCK

Select the values to place in manual mode by writing appropriate value to attribute 23.

Example:

1. Select manual mode for all outputs AOR:  
Value to write to attribute 23 - 001Fh

### Setpoint Output Register (SOR)

This attribute stores the states of the setpoint outputs. Reading from this attribute will show the present state of all the setpoint outputs. A "0" in the setpoint location means the output is off and a "1" means the output is on.

In Automatic Mode, the meter controls the setpoint output state. In Manual Mode, writing to this attribute will change the output state. Sending any character besides 0 or 1 in a field or if the corresponding output was not first in manual mode, the corresponding output value will not change.

#### Examples:

1. Turn all outputs on:  
Value to write to attribute 25 - 000Fh.
2. Turn outputs 1, 3 on:  
Value to write to attribute 25 - 0005h.
3. Turn all outputs off:  
Value to write to attribute 25 - 0000h.

### (AOR) Analog Output Register

The Analog Output Register controls the analog output of the meter. The manual mode must first be engaged by setting bit 4 of the CSR (PAX) or bit 0 of the MMR (PAXI, PAXCK). The range of values of this attribute is 0 to 4095, which corresponds to 0 mA, 0 V and 20 mA, 10 V; respectively. The table lists correspondence of the output signal with the attribute value.

Register Value	Output Signal*	
	I (mA)	V (V)
0	0.000	0.000
1	0.005	0.0025
2047	10.000	5.000
4094	19.995	9.9975
4095	20.000	10.000

\*Due to the absolute accuracy rating and resolution of the output card, the actual output signal may differ 0.15% FS from the table values. The output signal corresponds to the range selected (20 mA or 10 V).

Writing to this attribute while the meter is in the manual mode causes the output signal to update immediately. While in the automatic mode, this attribute may be written to, but the output will not update until the meter is placed in manual mode.

#### Examples:

1. Set output to full scale:  
Value to write to attribute 15 (PAX) or attribute 24 (PAXI) - 0FFFh (4095).
2. Set output to zero scale:  
Value to write to attribute 15 (PAX) or attribute 24 (PAXI) - 0000h (0).

### **LIMITED WARRANTY**

*The Company warrants the products it manufactures against defects in materials and workmanship for a period limited to one year from the date of shipment, provided the products have been stored, handled, installed, and used under proper conditions. The Company's liability under this limited warranty shall extend only to the repair or replacement of a defective product, at The Company's option. The Company disclaims all liability for any affirmation, promise or representation with respect to the products.*

*The customer agrees to hold Red Lion Controls harmless from, defend, and indemnify RLC against damages, claims, and expenses arising out of subsequent sales of RLC products or products containing components manufactured by RLC and based upon personal injuries, deaths, property damage, lost profits, and other matters which Buyer, its employees, or sub-contractors are or may be to any extent liable, including without limitation penalties imposed by the Consumer Product Safety Act (P.L. 92-573) and liability imposed upon any person pursuant to the Magnuson-Moss Warranty Act (P.L. 93-637), as now in effect or as amended hereafter.*

*No warranties expressed or implied are created with respect to The Company's products except those expressly contained herein. The Customer acknowledges the disclaimers and limitations contained herein and relies on no other warranties or affirmations.*

Red Lion Controls  
20 Willow Springs Circle  
York PA 17402  
Tel +1 (717) 767-6511  
Fax +1 (717) 764-0839

Red Lion Controls France  
56 Boulevard du Courcerin, Batiment 21,  
ZI Pariest F-77183 Croissy Beaubourg  
Tel +33 (64) 80 12 12  
Fax +33 (64) 80 12 13

Red Lion UK Ltd  
Tapton Park  
Chesterfield S41 OTZ  
Tel +44 (1246) 22 21 22  
Fax +44 (1246) 22 12 22